

Cuisinart®

2 Slice Toaster

CPT170U



Congratulations on your purchase of the Cuisinart 2 Slice Toaster.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment so that cooks at home as well as professional chefs have the tools to express their creativity.


All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day. That is why they have come to be regarded as the defining machines in their field by chefs across the world.

Whatever you cook, cook it better with Cuisinart.

Contents

| | |
|---------------------------------------------|----|
| Product Description | 5 |
| Safety Cautions | 6 |
| Instructions for Use | 10 |
| A Blue LCD Countdown Timer. | 10 |
| B Toasting | 11 |
| C Defrost Setting | 12 |
| D Reheat Setting | 13 |
| E Bagel Setting | 14 |
| F Toasting Techniques | 15 |
| G Crumb Tray | 16 |
| Cleaning & Maintenance | 17 |
| UK Guarantee | 18 |
| UK After Sales Service | 19 |

Product Description

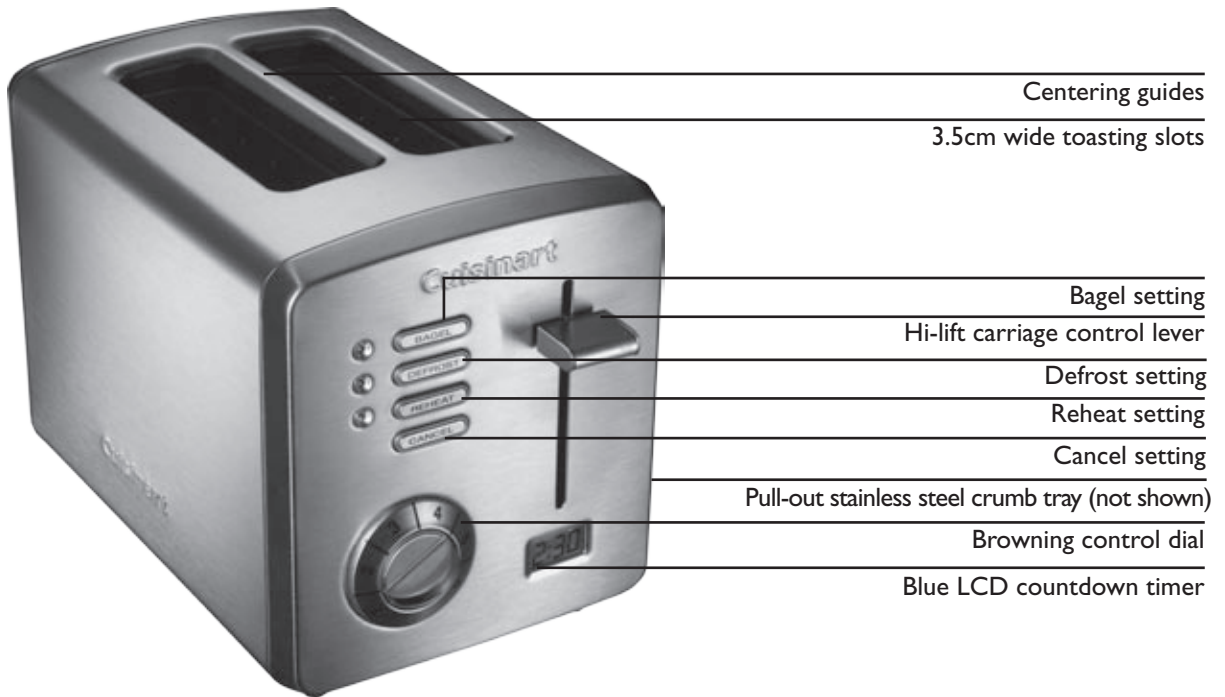

Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Cuisinart Customer Care Line (refer to UK After Sales Service section for further information).
- Do not use this appliance if the lead is damaged. In the event of lead damage discontinue use immediately. If the lead is damaged it must be replaced by a specialist lead available from the manufacturer or its service agent. (See UK After Sales Service section).
- No repair can be carried out by the user. Return the appliance to the 'Cuisinart Service Centre' for inspection and repair or replacement. (See 'UK After Sales Service' section).
- Do not touch hot surfaces. Allow to cool completely before handling this appliance.
- Bread may burn, therefore toaster must not be used near or below curtains or other combustible materials and must be carefully watched.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Use this appliance only for toasting as described within these instructions for use. Retain these for future reference.

- Do not use any attachments other than those recommended or sold by Cuisinart.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not allow the lead to come into contact with hot surfaces.
- Never pull the plug out of the mains socket by the lead.
- Do not allow the lead to overhang the edge of a kitchen table or worktop.
- For indoor use only.
- For domestic use only.
- This appliance complies with the basic requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 06/95/EEC (Safety of domestic electrical appliances) amended by Directive 93/68/EEC (CE Marking).
- Always ensure the voltage to be used corresponds with the voltage on the appliance, this is indicated on the bottom of the housing.
- Do not connect this appliance to an external timer or remote control system.

WARNING: A cut off plug inserted into a 13 amp outlet is a serious safety hazard. Ensure the cut off plug is disposed of safely.

WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.




The temperature of all surfaces marked with this symbol will be very hot when the appliance is in use.

DO NOT TOUCH these surfaces as possible injury could occur. Always allow to cool completely before handling this appliance.

Cuisinart®



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

Safety During Use

- Whilst in use the surfaces will become extremely hot. Do not touch hot surfaces.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or unit in water or other liquids.
- Do not place metallic packaging, paper, cardboard, plastic or any utensils in the toaster as they may cause a risk of fire or electric shock.
- Do not cover crumb tray or any part of the toaster with metal foil. This will cause overheating of the toaster.
- Never put your hands inside the toaster.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Always unplug from the mains when not in use.
- Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.
- Always ensure that your hands are dry before removing the plug from the mains outlet.

- **WARNING:** To avoid possibility of fire, do not leave the toaster unattended during use.
- If the carriage control lever becomes jammed during the toasting cycle, do not try to release it. Switch off the power at the mains (if appropriate), unplug the toaster and leave it to cool down before carefully removing the bread. Do not use a knife, fork or other sharp implement as this may damage the element.
- Before making toast for the first time, set the browning control to 6 and operate the toaster without bread to burn off any dust etc. from the new elements. This may produce a distinctive smell which is normal.
- Do not toast 'buttered' items or try to make toasted sandwiches in the toaster, as this will create a fire hazard.
- Do not use torn or curled up slices of bread as these could jam the eject mechanism.
- Only use the toaster with the crumb tray in place.

Cuisinart[®]

Instructions for Use

Remove all packaging from the product and unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug the power cord into a suitable mains outlet and switch on.

A **Blue LCD Countdown Timer**

The digital timer displays exactly how many minutes and seconds are remaining before toast is ready.

N.B. The timer display will light up blue to indicate the appliance is switched on and ready to use



B Toasting

Toasting is a combination of cooking and drying of the bread, therefore differences in moisture levels from one bread to another can result in varying toasting times. For our recommended “Toasting Techniques” see page 14)

- Ensure the carriage control lever is in the up position.
- Insert slice(s) of bread.
- Turn the browning control dial to the desired position:

| Dial Setting | Colour | Approximate Time |
|--------------|--------|------------------|
| 1-2 | Light | 1-1½ mins |
| 3-4 | Medium | 2-2½ mins |
| 5-6 | dark | 2½-3mins |

- Press the carriage control lever down until it locks into position.
 - N.B.** Press the bread carriage down fully. It will only lock down if the toaster is connected to an electrical outlet.
- Stop toasting cycle: When the cycle is complete, the toaster will automatically raise the bread.
 - N.B.** If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug the toaster from the mains outlet.
 - N.B:** After toasting smaller items (bagels, crumpets etc.) the hi-lift carriage control lever may be raised further to allow them to be removed more easily.

C Defrost Setting

The Defrost setting is designed to first defrost then toast bread in one automatic cycle.

- Ensure the carriage control lever is in the up position.
- Insert slice(s) of bread.
- Turn the browning control dial to the desired position:
- Press the carriage control lever down until it locks into position.
- Press the Defrost button. Blue LED indicates feature is activated.
- **N.B.** If you wish to defrost bagels, ensure the bagel button is also pressed. This will extend the toasting cycle further.
- **Stop toasting cycle:** When the cycle is complete, the toaster will automatically raise the bread.
N.B. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug the toaster from the mains outlet.

D Reheat Setting

The Reheat setting allows you to reheat bread without browning or toasting.

- Ensure the carriage control lever is in the up position.
- Insert slice(s) of bread.
- Press the carriage control lever down until it locks into position.
- Press the Reheat button. Blue LED indicates feature is activated.

N.B. The Reheat cycle lasts approximately 30 seconds. When reheating toast, it is not necessary to adjust the browning control. Only reheat plain 'unbuttered' toast.

- Stop toasting cycle: When the cycle is complete, the toaster will automatically raise the bread.


N.B. If you wish to stop the cycle before it is finished, simply press the 'Cancel' button to interrupt. After use, unplug the toaster from the mains.

E Bagel Setting

The Bagel Setting adds extra time to the toasting cycle to allow for thicker breads and bagels.

- Ensure the carriage control lever is in the up position.
- Insert bagel.

N.B. Before toasting bagels, slice each bagel into two equal halves and place the two halves into the slots with the cut sides facing towards the outside elements (as pictured). The cut sides will be toasted and the 'outside' of the bagel will just be warmed.

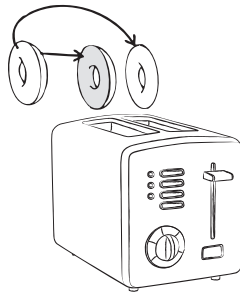

- Press the carriage control lever down until it locks into position.
- Press the Bagel button. Blue LED indicates feature is activated.

N.B. If you wish to defrost Bagels, ensure the Defrost button is also pressed. This will extend the toasting cycle further.

- Stop toasting cycle: When the cycle is complete, the toaster will automatically raise the bagel.

N.B. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug the toaster from the mains.

F Toasting Techniques

Toasting is a combination of cooking and drying of the bread, therefore differences in moisture levels from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces will require a higher toast setting.
- Thick cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can begin. Very thick pieces may require two cycles.
- Sweet bread products (tea cakes, fruit loaf etc.) brown quicker than ordinary bread, ensure a lower setting is used.
- When toasting raisin or other fruit breads, remove any loose raisins etc. from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.
- Before toasting bagels, slice each bagel into two equal halves (see Bagel Setting instructions page).

Single Slice Toasting

- If you are toasting a single slice of bread, set the dial setting at a lower level that you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you will not over-toast.

Toaster Pastries

- Take extra care with toaster pastries; the filling can become very hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming. When toasting pastries, follow the manufacturers instructions for use.

G **Crumb Tray**

- The toaster is equipped with one pull-out crumb tray. We recommend that the crumb tray is emptied on a regular basis.
- To empty, simply slide out the crumb tray, discard the crumbs and replace the crumb tray. Never operate the toaster without the crumb tray in place.

IMPORTANT:

- Never force foods into the toasting slot. Foods should fit freely between the centering guides.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Never insert any hard, sharp or metal instruments into the slots as this could cause damage to the toaster and cause a safety hazard.
- After use, always unplug your toaster from the mains outlet.

Cleaning & Maintenance



- Always allow the toaster to cool completely before cleaning.
- Always ensure that your hands are dry before removing the plug from the mains outlet.
- Always disconnect the toaster from the mains immediately after use and before cleaning.
- Never disconnect the plug by pulling on the mains lead.
- Do not immerse the appliance in water or any other liquid or put it in a dishwasher.
- Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleaning agent to a cloth, not to the toaster, before cleaning.
- We recommend that the crumb tray is emptied and cleaned on a regular basis. Never operate the toaster without the crumb tray in place.
- To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake.
- Never wrap the cord around the outside of the toaster.

IMPORTANT:

- Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard.

The Cuisinart logo is displayed in white text on a black square background. The word "Cuisinart" is written in a bold, sans-serif font, with a registered trademark symbol (®) to the upper right of the letter 't'.

Cuisinart®

UK Guarantee

- This Cuisinart appliance is guaranteed for domestic consumer use for 5 years.
- The guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons.
- If the appliance does not perform satisfactorily due to defects of material or manufacture, it will be repaired or replaced by the manufacturer (see UK After Sales Service for details).
- This guarantee is only valid in the United Kingdom and Eire (includes Channel Islands and The Isle of Man).
- No responsibility will be accepted for any damage caused in transit.
- A charge may be made if goods are returned outside the relevant guarantee period or if the product is returned unnecessarily.
- The manufacturer reserves the right to amend terms and specifications without prior notice.
- This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using your Cuisinart 2 Slice Toaster and other products in the Cuisinart range, contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to support@cuisinart.co.uk

In Guarantee

Firstly, please call the Cuisinart Helpline 0870 240 6902.

Return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre
P.O. Box 506
WIGAN
WNI 9AA

Enclose your name and address, together with proof of purchase and details of the fault. Cuisinart will either repair or replace the product, as appropriate.

Out of Guarantee

Contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to support@cuisinart.co.uk for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre
P.O. Box 506
WIGAN
WNI 9AA

Enclose your name, address and contact number along with details of the fault.

www.cuisinart.co.uk

Starlite Electronic Pre-Press System

Version No.: **CPT170U IB-8/169**
Size: **210mm(W)X 210mm(H)(new)**
Material Cover: **157GSM GLOSS ARIPAPER**
Inside: **157GSM GLOSS ARTPAPER**
Coating: **waterbase varnishing FOR WHOLE BOOK**
Color Front. Cover: **1C (black) ; inside: 1C(black)**
Back. Cover: **1C (black) ; inside: 1C (black)**
Date: **2008-05-28** Co-ordinator: **Alice Chong**

Client: **G0028**
Starlite No: **126457IBB**
Proof: **2nd**
Handled By: **Z002013**

Black

