

**Cuisinart®**

**Stainless Steel Jug Kettle**

KE745IU



Congratulations on your purchase of the Cuisinart Stainless Steel Jug Kettle.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment so that cooks at home as well as professional chefs have the tools to express their creativity.

All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day. That is why they have come to be regarded as the defining machines in their field by chefs across the world.


Whatever you cook, cook it better with Cuisinart.



## Contents

<b>Product Description</b> .....	5
<b>Safety Cautions.</b> .....	6
<b>Instructions for Use</b> .....	8
<b>Hints and tips</b> .....	9
<b>Cleaning &amp; Maintenance</b> .....	10
<b>Descaling</b> .....	10
<b>Guarantee</b> .....	11
<b>UK After Sales Service</b> .....	12

## Product Description

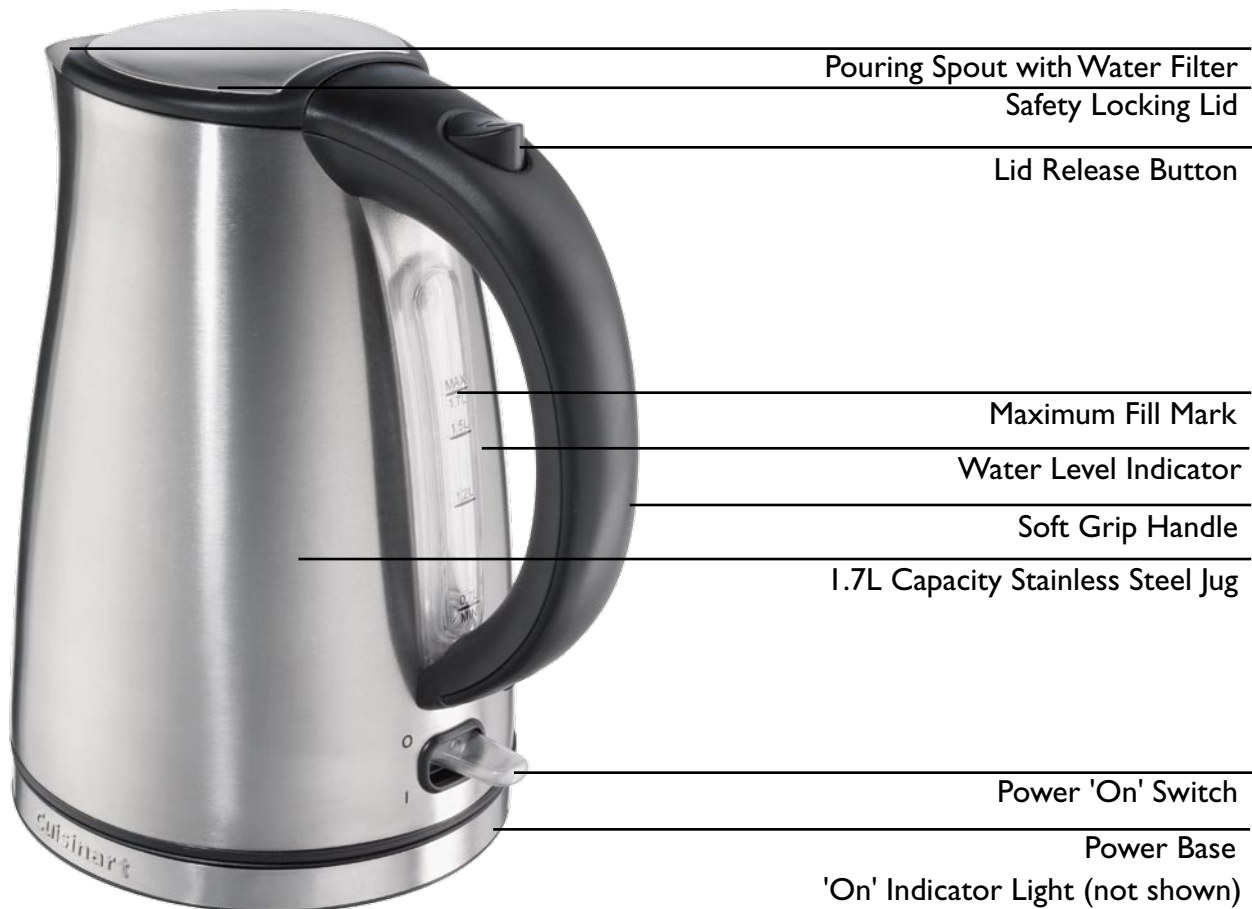

**Read all the instructions thoroughly before using the appliance and keep in a safe place for future reference**


## **Safety Cautions**

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Ensure all packaging materials and any promotional labels or stickers are removed from the kettle before first use.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Whilst in use the surfaces will become extremely hot. Do not touch hot surfaces. Always use handles.
- Do not use any accessories or attachments with this appliance other than those recommended by Cuisinart.
- Always inspect this appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service" section for further information).
- Unplug from mains when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not use this appliance if the plug or lead is damaged, after the appliance has malfunctioned or has been damaged in any manner. Return the appliance to the manufacturer. (See "UK After Sales Service").
- For indoor use only.
- For domestic use only.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains outlet by its lead.
- Do not immerse unit or base in water or any other liquids.
- Do not place on or near other heated surfaces. (e.g. gas burners, electric hobs, ovens etc.)
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or unit in water or other liquids.

- This appliance should be used only for preparation of drinks / food as described within the instructions for use that accompany it. Please retain these instructions for further use.
- This Kettle must only be used with the base provided.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- Do not exceed the maximum fill level as clearly marked on the water level indicator. Overfilling will cause the kettle to leak.
- Do not turn the kettle power on when there is no water in the jug.
- Empty the water after each use.
- Always close the lid before plugging in and turning on the kettle.
- Avoid steam from the nozzle and the lid.
- If the kettle can be filled through the lid, position lid so that steam is directed away from the handle.
- Do not remove the lid whilst the water is boiling as scalding may occur.
- Ensure that the kettle is switched off before removing the kettle jug from the stand.
- Do not place on heat sensitive surfaces.
- Switch off and unplug the appliance after use.
- This appliance complies with the requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 2006/95/CE (Electrical Safety of Domestic Appliances) amended by Directive 93/68/EEC (CE marketing).
- **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
- **WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

## Instructions for Use

Before using for the first time we recommend operating the kettle 2 or 3 times. Fill to the MAX. marked fill level, bring to the boil and when boiling has finished and the kettle has switched off, discard the water and rinse out the inside. This will remove any dust or residue remaining from its manufacture.

- Open the lid by pressing the lid release button, located on the top of the handle.
- Fill the kettle with the required amount of cold water, the water gauge is at the rear of the kettle and is marked with min and max, please take care not to exceed the max mark as this may cause spitting from the spout when boiling.
- Ensure the lid is closed and locked in position; you will feel and hear a slight click.
- Align the kettle over the powerbase and gently lower it in to position, it will find its own way and sit firmly on the base.
- Switch the kettle on by pressing down the power switch at the rear of the kettle, you will hear a slight click and the switch will illuminate with a blue LED.
- The kettle will switch off automatically when it has completed the boil, however the kettle can be switched off at any time by simply lifting the power switch in an upwardly direction, the LED will switch off and the same click will be heard as switching on.
- Carefully lift the kettle off the powerbase and pour the water, please note if the kettle is removed from the powerbase before it's automatically switched off, it will carry on to boil when it's replaced on the powerbase.  
**NB:** A couple of water droplets or condensation may appear on the powerbase, this is quite normal and not a leak.  
**NB:** Do not open the lid of the kettle when pouring, escaping steam may scald.
- Once the kettle is re-located on the powerbase it can be switched on again at any time, if the switch will not stay down it means the control is still a little warm, this is normal and it will simply re-set itself in a few seconds when cooled and will be ready to boil again.

## Hints and tips

- Always use fresh, cold water each time you boil.
- As soon as the kettle boils, pour the water into your ceramic pot or cup directly onto the tea. The tea should be allowed to steep for 3 to 5 minutes. The longer it steeps the stronger it is. For iced tea, brew tea double-strength (steep twice as long) and pour over ice. Stir and serve as desired.  
**N.B.** For your safety, always close the lid when the kettle is in use.
- If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.
- Empty the kettle after each use. Do not leave water standing in the kettle

## Cleaning & Maintenance

- Always unplug the appliance from the mains outlet before cleaning.
- Allow to cool before cleaning the appliance.
- Clean the exterior surface of the kettle with a clean damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.
- Clean the water filter with a soft, clean, damp cloth once a month or as necessary.
- Do not use abrasive cleaners or scouring agents of any kind on the interior or exterior of the kettle.

**WARNING!** Do not immerse the kettle or power base in water or other liquid. Ensure the electric kettle socket is kept dry.

## Descaling

- To get the best performance from your Cuisinart Stainless Steel Jug Kettle, we recommend descaling it from time to time. Frequency depends on the hardness of your tap water and how often you use your kettle.
- We suggest use of a kettle descaler in order to dissolve the scale. Simply follow the manufacturer's guidelines on the packaging.
- Alternatively pour in enough white vinegar to cover the bottom of the jug by about 2cm. Bring the vinegar to the boil; you may need to repeat this several times with cooled vinegar to remove the build-up completely. When the kettle is descaled, empty the kettle and rinse out several times with clean water. Take care not to inhale fumes.

## UK Guarantee

- This Cuisinart appliance is guaranteed for domestic consumer use for 3 years.
- The guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons.
- If the appliance does not perform satisfactorily due to defects of material or manufacture, it will be repaired or replaced by the manufacturer (see UK After Sales Service for details).
- This guarantee is only valid in the United Kingdom (including Northern Ireland, Republic of Ireland, the Channel Islands and the Isle of Man).
- No responsibility will be accepted for any damage caused in transit.
- A charge may be made if goods are returned outside the relevant guarantee period or if the product is returned unnecessarily.
- The manufacturer reserves the right to amend terms and specifications without prior notice.
- This guarantee in no way affects your statutory rights.

The Cuisinart logo is displayed in white text on a black square background.

## **UK After Sales Service**

For further advice on using your Cuisinart Stainless Steel Jug Kettle and other products in the Cuisinart range, contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk).

### **In Guarantee**

Firstly, please call the Cuisinart Helpline 0870 240 6902.

Return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre  
P.O. Box 506  
WIGAN  
WNI 9AA

Enclose your name and address, together with proof of purchase and details of the fault.

Cuisinart will either repair or replace the product, as appropriate.

### **Out of Guarantee**

Contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to [support@cuisinart.co.uk](mailto:support@cuisinart.co.uk) for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre  
P.O. Box 506  
WIGAN  
WNI 9AA

Enclose your name, address and contact number along with details of the fault.

**Cuisinart®**

**[www.cuisinart.co.uk](http://www.cuisinart.co.uk)**